



# Screen Game Console 64G Gaming 4.5 Inch IPS HD

SKU: PDX622



## Instruction Manual

Before installing and using the product, please carefully read this User Manual to guarantee correct usage.

(Please keep this instruction manual securely for future use.)




## Notices

This section is designed to guide the user in the correct use of the player. Please read and follow the instructions carefully.

- ▶ Avoid hitting the console with force.
- ▶ Do not expose the console to chemicals such as benzene or solvents.
- ▶ Keep the console away from magnetic and electric fields.
- ▶ Avoid exposing the console to direct sunlight or heat sources.
- ▶ Do not attempt to disassemble, repair, or modify the console yourself.
- ▶ Avoid using the player or headphones while driving or riding motorcycles to prevent accidents.
- ▶ Avoid listening to high volume levels to prevent adverse effects on your hearing.
- ▶ Prevent water from coming into contact with the console.



## Labels for Console Parts

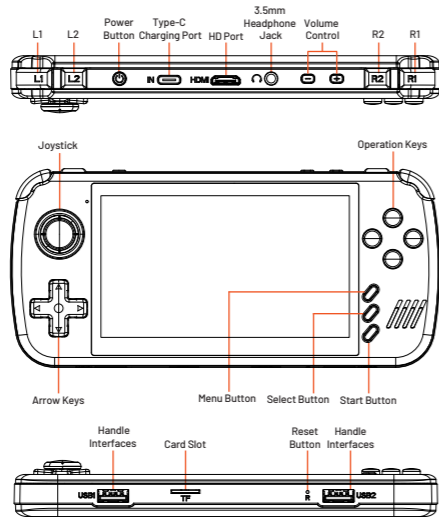

## System Main Interface

Key Operation Guide after Entering the Main System Interface

A	Confirm key, used to enter the game or start a selected function.
B	Cancel button.
X	Controller characters to perform actions like punch/shoot/jump; functions vary with the game.
Y	Similar to X, used for character actions within games.
Menu	Access the game's menu.



## Important Settings

### Adjusting Settings after Startup

1. Language: Press the X key to access settings, navigate with cross key or joystick, select language, and confirm with the A key.
2. Theme Style: Modify the theme using the cross key or joystick and confirm with the A key.
3. Backlight: Adjust the backlight brightness using the cross key or joystick and confirm with the A key.
4. Advanced Settings: View detailed information about the device, such as version and memory size; toggle key tone on or off.



## Installing Games

To add games, use a computer to transfer the game file and the corresponding preview file to the TF card. Ensure the game file name matches the preview file name. Place these files in the appropriate simulator or folder path.



## Basic Function

- ▶ Display: 4.5 inch IPS screen, Resolution: 480\*854
- ▶ TV Connection: Supports output to TV
- ▶ Expansion: Supports TF card for additional storage
- ▶ Compatibility: Supports various game formats including CPS, FBA, FC, GB, GBA, GBC, NEOGEO, SFC, MD, PS
- ▶ Game Download: Allows downloading of supported game formats
- ▶ Game Search: Features a search function for game titles by the first letter of their phonetic name
- ▶ Save Feature: Includes an instant save function
- ▶ Game History: Records previously played games
- ▶ Favorites: Enables setting of favorite games
- ▶ Standby: Standby function available
- ▶ Languages: Multiple language settings provided
- ▶ Customization: Options to adjust energy-saving settings, screen brightness, and interface background

Note: Functionality may vary between different batches of products. Refer to the actual product for specific features.




## Low Battery

When the battery level is low, the screen may flash and sound may stutter. The device should be charged promptly. Charge the device before the battery is completely depleted using the provided adapter. The ideal charging specification is between 500mA-2000mA. Do not charge for more than 4 hours consecutively.



## Video Output

### How to Connect

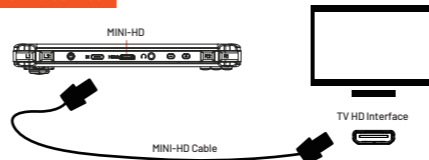

## System Function

### Main Interface Operation:

1. Favorites: Use the SELECT button to mark or unmark games as favorites within the main game list.
2. Category: Access different game categories and choose the desired emulator using the joystick or arrow keys.
3. History: View a list of the most recently played games.
4. Search: Utilize the A button to input characters, B to hide the keyboard, X to select characters, and Y to delete characters.

### In-Game Menu Access:

Press the Menu button during gameplay to access options such as restarting the game, saving/loading progress, changing settings, or exiting the game.



## Troubleshooting

### 1. Power Issues:

If the console won't power on, ensure the battery isn't depleted and try recharging with a USB or standard charger.

### 2. Audio Issues:

If there's no sound in headphones, verify the volume isn't set to zero and that the headphones are correctly connected.



## Warranty

### Exclusion

- Porodo doesn't cover any damage caused by the normal use of the product over time during the warranty period.
- The Porodo warranty doesn't include coverage for improper use, deliberate damage, accidents, theft, carelessness, or any repairs done by unauthorized service centers.
- The power needs for each product are clearly stated on their packages. Please check these requirements against those of your country before buying. Porodo won't be responsible for any problems related to this.

### For more info, please check:

porodo.net/warranty

### Contact Us

If you have any questions about this Privacy Policy, please contact us at: [info@porodo.net](mailto:info@porodo.net)  
 Website: [porodo.net](http://porodo.net)  
 Service Support: [support@porodo.net](mailto:support@porodo.net)  
 Instagram: [porodo](https://www.instagram.com/porodo)