

porodo
LIFESTYLE

USER MANUAL

HIGH-PRECISION BEARD TRIMMER
WITH DIGITAL DISPLAY

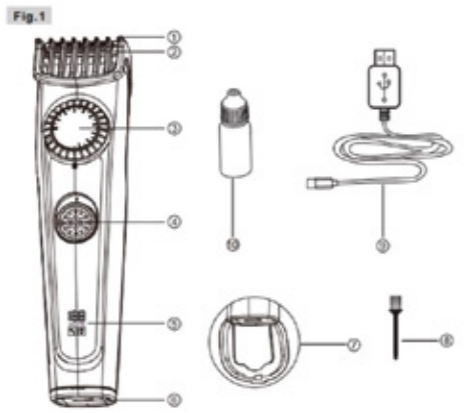
PD-LSRBHTR-BK

English

Our products are designed to meet the highest standard of quality, functionality and design. We hope you enjoy using your new appliance. Please read the instructions for use carefully and keep in a safe place for future reference.


CAUTION
Use this appliance only for its intended use as described in this manual. Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped into water.

DESCRIPTIONS




- Guide comb
- Blade head
- Precision Zoom Lock Adjustment Ring
- Slide On/Off Switch
- Digital Display for battery status
- Socket for Appliance Plug
- Hanger Hook
- Cleaning brush
- Charging Cable
- Oil

2. USB charging for convenient use. Insert the USB charging pin into the appliance then USB cable connect your computer or any USB adaptor, then the adaptor to the mains. (Fig.3)



3. Digital Display For Battery Status



battery capacity minutes
| indicator that need clean

To Charge/Recharge

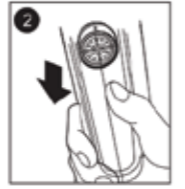
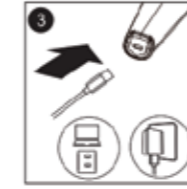
Fully charge Trimmer before using for the first time or after non-use for a long period of time. Charging, recharging or using Trimmer at temperatures below 0°C or higher than 50°C adversely affects lifespan of the battery. If the Trimmer is subjected to a major change in temperature, pressure or humidity, let the Trimmer acclimatize for 30 minutes before using.

Continuously recharging Trimmer will reduce lifespan of battery.


- If the Trimmer is subjected to a major change in temperature, pressure or humidity, let the Trimmer acclimatize for 30 minutes before using.
- Continuously recharging Trimmer will reduce lifespan of battery.

1. Be certain Trimmer is OFF. (Fig.2)

2. USB charging for convenient use. Insert the USB charging pin into the appliance then USB cable connect your computer or any USB adaptor, then the adaptor to the mains. (Fig.3)

3. Digital Display For Battery Status



battery capacity minutes
| indicator that need clean

Charging Indicator (full charged, the sign disappear)

The appliance have charging indicator. During charging, the digital number will be up and up till keep 120 then the appliance is full charged.

- It will take approximately 2 hours to fully charge the Trimmer for a cordless trimming time of up to 120 minutes.

Optimize the working life of the battery

- After the Trimmer has been charged for the first time, do not recharge the Trimmer between trimming sessions. Continue using it until the battery is completely empty.
- Do not charge for more than 2 hours.
- Do not keep cord permanently plugged in.
- Discharge run down the battery completely twice a year by letting the motor run until it stops.
- If the Trimmer hasn't been used for a long period of time, it must be recharged for a full 1-2 hours.

Cordless Trimming

- Charge according to directions. Unplug Trimmer from outlet and remove cord.
- Slide ON/OFF switch ON to begin trimming.
- When finished, turn Trimmer OFF.

Trimming

- Use this Trimmer for its intended household use as described in this manual.
- Always comb the beard and/or moustaches with a fine comb before you start trimming.
- If you are trimming for the first time, be careful. Do not move the Trimmer too fast. Make smooth and gentle movements.
- Make sure that the Trimmer is fully charged before you start trimming.


Trimming with the Beard Trimming Comb

- Beard Trimming Comb must be on Trimmer to use the Zoom Lock.
- Turn the Zoom Lock to the desired trimming length setting (see table). The setting is indicated in the center of the adjustment ring (Fig. 4). It has total 20 settings, length from 0.5mm to 10mm.

Setting	Hair length after trimming	Setting	Hair length after trimming
1	0.5mm	11	5.5mm
2	1mm	12	6mm
3	1.5mm	13	6.5mm
4	2mm	14	7mm
5	2.5mm	15	7.5mm
6	3mm	16	8mm
7	3.5mm	17	8.5mm
8	4mm	18	9mm
9	4.5mm	19	9.5mm
10	5mm	20	10mm

If you are trimming for the first time, start by using the comb at the maximum trimming length setting (#10) to prevent accidentally trimming hairs too short. As you become familiar with the settings, adjust Zoom Lock to desired trimming length. Zoom Lock will "click" into position at each setting.

Switch the Trimmer ON. To trim in the most effective way, move the Trimmer against the direction of hair growth. Make sure the surface of the comb always stays in contact with the skin (Fig. 5).

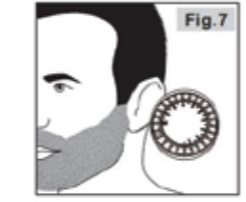


NOTE: Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e., upwards, downwards, or across). Practice is best for optimum results.

If cut hairs have accumulated in the comb, turn Trimmer OFF, remove the comb and blow and/or shake the hair out of the comb (Fig. 6). The selected trimming length setting will not change when you do this.

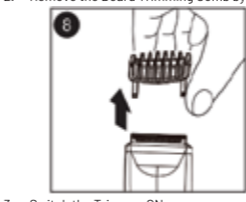
Trimming For "Stubble" Look

- Be certain Beard Trimming Comb is on Trimmer and use setting 11(3/4in/mm) to result in a "stubble" look (fig.7).




Trimming Without the Beard Trimming Comb

- Remove comb if you are:
 - Defining hair lines
 - Trimming nape of neck
 - Removing single unwanted hairs
- Be certain the Trimmer is in the OFF position.
- Remove the Beard Trimming Comb by pulling it off the Trimmer (fig. 8).



3. Switch the Trimmer ON.


4. Make well-controlled movements. Touch the hair/skin lightly with the Trimmer (fig.9).



Be careful when you are trimming without the comb as when the Trimmer is turned on it will trim every hair it touches.

Cleaning

- Clean the Trimmer after each use.
- Always switch Trimmer OFF, unplug and remove power supply cord from Trimmer before cleaning.
- Never immerse the Trimmer in water or rinse under the tap (fig.10).



- Do not use abrasive cleaning agents, scourers or aggressive liquids such as alcohol, gasoline, or acetone to clean the Trimmer and attachments.
- Never clean, replace or remove Trimmer comb with motor ON.
- Do not apply pressure to cutters.
- Do not touch cutters with hard objects as this may damage them.
- Use a soft, dry cloth to clean Trimmer handle.


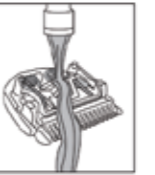
During Use:

- If cut hairs have accumulated in the comb area, turn Trimmer off, pull the comb off Trimmer and remove hairs by shaking, blowing or using cleaning brush provided.

After Each Use:

- Make sure the Trimmer is switched OFF, and disconnected from the electrical outlet
- Remove the Trimming Comb and clean with the brush.

3. Remove the cutting unit by pushing against the teeth of the cutting unit (fig. 11) and rinse under warm tap water (fig. 1 2) or use the brush supplied.

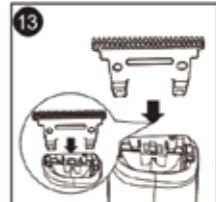
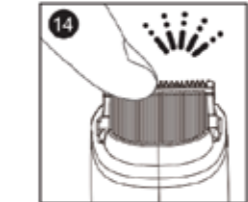



Allow to air dry thoroughly.

- Place the cutting unit back by inserting the notch of the cutting unit into the guiding slot (Fig. 13).
- Push the cutting unit back into place on the Trimmer until you hear a click (fig. 14).

Replacing The cutting Unit

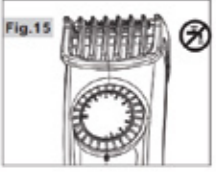

- If your cutters become damaged or worn, do not continue using the Trimmer. Replace cutters immediately.
- Open the cutting unit.
- Remove the old cutting unit by pushing against the teeth of the cutting unit (fig. 11).
- Insert the notch of the new cutting unit into the guiding slot (fig. 13).
- Push the cutting unit back onto the Trimmer until you hear a "click" (fig. 14).

WARNING

- Never immerse the machine in water or rinse under the tap. (Fig.15)
- Only the trimmer attachment can immerse in water or rinse under the tap separate from machine (Fig.16)

Storage

Be sure Trimmer is turned OFF. Remove cord from outlet and Trimmer before storing in a safe, dry location where it will not be crushed, banded, or subject to damage. Do not wrap cord around Trimmer when storing. Store cord in a safe location where it will not be cut or damaged. Do not place or store Trimmer where it can fall or be pulled into a tub or sink, water or other liquid.

Specifications

Battery: 800mAh Li-Ion
Motor: DC 3.7V
Charging Time: 2 Hours
Working Time: 2 Hours
Charging Port: USB-C (Cable Included)
Accessories Included: 1 Adjustable Head / Oil / Cleaning Brush
Product Dimensions: 32x29.5x183mm
Product Weight: 154.2g

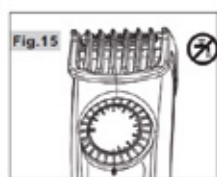
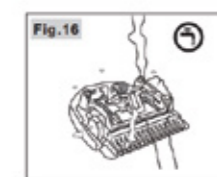
CE RoHS Made in China

www.porodo.net | #porodo | #myporodo

تحذير

لا تغمر آلة الحلاقة في الماء أو تغطها تحت الحوض المصنوع للصور. إذا لم تكن متأكدًا من كيفية غمر رأس الحلاقة في الماء أو كيفية تجنب الحوض بشكل صحيح، يرجى الرجوع إلى دليل المستخدم (Fig. 15).

التخزين

المواصفات

بطارية: 800mAh ليثيوم أيون
محرك: DC 3.7V
وقت الشحن: 2 ساعة
وقت العمل: 2 ساعة
منفذ الشحن: USB-C (شحن كابل متضمن)
أبعاد المنتج: 32x29.5x183mm
وزن المنتج: 154.2g

www.porodo.net | #porodo | #myporodo

٣. هز رأس وحدة القطع الخاصة على أسنان وحدة القطع الشكل ١٥ وتغطها تحت حوض الصور المصنوع للصور. إذا لم تكن متأكدًا من كيفية غمر رأس الحلاقة في الماء أو كيفية تجنب الحوض بشكل صحيح، يرجى الرجوع إلى دليل المستخدم (Fig. 16).

٤. هز وحدة القطع المصنوعة على طرف إبرة حتى يخرج حوض وحدة القطع في الفتحة المعلقة الشكل ١٣. لا تغمر رأس الحلاقة في الماء أو تغطها تحت الحوض المصنوع للصور. إذا لم تكن متأكدًا من كيفية غمر رأس الحلاقة في الماء أو كيفية تجنب الحوض بشكل صحيح، يرجى الرجوع إلى دليل المستخدم (Fig. 15).

تنظيف

بعد كل استخدام
١. تأكد من إيقاف تشغيل الحلاقة في حوضها عند استخدامها في الحوض الكهربائي.
٢. هز رأس وحدة القطع الخاصة على طرف إبرة حتى يخرج حوض وحدة القطع في الفتحة المعلقة الشكل ١٣. لا تغمر رأس الحلاقة في الماء أو تغطها تحت الحوض المصنوع للصور. إذا لم تكن متأكدًا من كيفية غمر رأس الحلاقة في الماء أو كيفية تجنب الحوض بشكل صحيح، يرجى الرجوع إلى دليل المستخدم (Fig. 16).

استبدال وحدة القطع

إذا ارتجبت الحلاقة أثناء الحلاقة، أو إذا لم تكن متأكدًا من استخدام وحدة القطع الخاصة، فقم بفتح حوض وحدة القطع. لفصل وحدة القطع القديمة عن حوض وحدة القطع، اضغط على حوض وحدة القطع. لفصل وحدة القطع القديمة عن حوض وحدة القطع، اضغط على حوض وحدة القطع. لفصل وحدة القطع القديمة عن حوض وحدة القطع، اضغط على حوض وحدة القطع. لفصل وحدة القطع القديمة عن حوض وحدة القطع، اضغط على حوض وحدة القطع.

تنظيف

بعد كل استخدام
١. تأكد من إيقاف تشغيل الحلاقة في حوضها عند استخدامها في الحوض الكهربائي.
٢. هز رأس وحدة القطع الخاصة على طرف إبرة حتى يخرج حوض وحدة القطع في الفتحة المعلقة الشكل ١٣. لا تغمر رأس الحلاقة في الماء أو تغطها تحت الحوض المصنوع للصور. إذا لم تكن متأكدًا من كيفية غمر رأس الحلاقة في الماء أو كيفية تجنب الحوض بشكل صحيح، يرجى الرجوع إلى دليل المستخدم (Fig. 16).

٤. القيام بحركة واحدة للحجم الجسم لشعر واحد فقط باستخدام أداة التشذيب الشكل ١٩.

٥. تأكد من إيقاف تشغيل الحلاقة في حوضها عند استخدامها في الحوض الكهربائي.
٦. هز رأس وحدة القطع الخاصة على طرف إبرة حتى يخرج حوض وحدة القطع في الفتحة المعلقة الشكل ١٣. لا تغمر رأس الحلاقة في الماء أو تغطها تحت الحوض المصنوع للصور. إذا لم تكن متأكدًا من كيفية غمر رأس الحلاقة في الماء أو كيفية تجنب الحوض بشكل صحيح، يرجى الرجوع إلى دليل المستخدم (Fig. 15).

تنظيف

بعد كل استخدام
١. تأكد من إيقاف تشغيل الحلاقة في حوضها عند استخدامها في الحوض الكهربائي.
٢. هز رأس وحدة القطع الخاصة على طرف إبرة حتى يخرج حوض وحدة القطع في الفتحة المعلقة الشكل ١٣. لا تغمر رأس الحلاقة في الماء أو تغطها تحت الحوض المصنوع للصور. إذا لم تكن متأكدًا من كيفية غمر رأس الحلاقة في الماء أو كيفية تجنب الحوض بشكل صحيح، يرجى الرجوع إلى دليل المستخدم (Fig. 16).

استبدال وحدة القطع

إذا ارتجبت الحلاقة أثناء الحلاقة، أو إذا لم تكن متأكدًا من استخدام وحدة القطع الخاصة، فقم بفتح حوض وحدة القطع. لفصل وحدة القطع القديمة عن حوض وحدة القطع، اضغط على حوض وحدة القطع. لفصل وحدة القطع القديمة عن حوض وحدة القطع، اضغط على حوض وحدة القطع. لفصل وحدة القطع القديمة عن حوض وحدة القطع، اضغط على حوض وحدة القطع. لفصل وحدة القطع القديمة عن حوض وحدة القطع، اضغط على حوض وحدة القطع.

تنظيف

بعد كل استخدام
١. تأكد من إيقاف تشغيل الحلاقة في حوضها عند استخدامها في الحوض الكهربائي.
٢. هز رأس وحدة القطع الخاصة على طرف إبرة حتى يخرج حوض وحدة القطع في الفتحة المعلقة الشكل ١٣. لا تغمر رأس الحلاقة في الماء أو تغطها تحت الحوض المصنوع للصور. إذا لم تكن متأكدًا من كيفية غمر رأس الحلاقة في الماء أو كيفية تجنب الحوض بشكل صحيح، يرجى الرجوع إلى دليل المستخدم (Fig. 16).

مؤشر الشحن [متشويح بالكامل، تختفي العلامة]

عند شحن المؤشر، يظهر مؤشر شحن. عندما يختفي المؤشر، فهذا يعني أن الحلاقة قد اكتملت. إذا لم تكن متأكدًا من كيفية شحن الحلاقة، يرجى الرجوع إلى دليل المستخدم (Fig. 15).

تحسين العمر التشغيلي للبطارية

بعد شحن الحلاقة، لا تستخدمها لمدة تزيد عن 2 ساعة. إذا لم تكن متأكدًا من كيفية شحن الحلاقة، يرجى الرجوع إلى دليل المستخدم (Fig. 15).

تنشيط لاسلكي

بعد شحن الحلاقة، لا تستخدمها لمدة تزيد عن 2 ساعة. إذا لم تكن متأكدًا من كيفية شحن الحلاقة، يرجى الرجوع إلى دليل المستخدم (Fig. 15).

التشذيب

بعد شحن الحلاقة، لا تستخدمها لمدة تزيد عن 2 ساعة. إذا لم تكن متأكدًا من كيفية شحن الحلاقة، يرجى الرجوع إلى دليل المستخدم (Fig. 15).

التهديب بالاحية منشط تشذيب

بعد شحن الحلاقة، لا تستخدمها لمدة تزيد عن 2 ساعة. إذا لم تكن متأكدًا من كيفية شحن الحلاقة، يرجى الرجوع إلى دليل المستخدم (Fig. 15).

١. تأكد من إيقاف تشغيل الحلاقة في حوضها عند استخدامها في الحوض الكهربائي.
٢. هز رأس وحدة القطع الخاصة على طرف إبرة حتى يخرج حوض وحدة القطع في الفتحة المعلقة الشكل ١٣. لا تغمر رأس الحلاقة في الماء أو تغطها تحت الحوض المصنوع للصور. إذا لم تكن متأكدًا من كيفية غمر رأس الحلاقة في الماء أو كيفية تجنب الحوض بشكل صحيح، يرجى الرجوع إلى دليل المستخدم (Fig. 16).

تنشيط لاسلكي

بعد شحن الحلاقة، لا تستخدمها لمدة تزيد عن 2 ساعة. إذا لم تكن متأكدًا من كيفية شحن الحلاقة، يرجى الرجوع إلى دليل المستخدم (Fig. 15).

التشذيب

بعد شحن الحلاقة، لا تستخدمها لمدة تزيد عن 2 ساعة. إذا لم تكن متأكدًا من كيفية شحن الحلاقة، يرجى الرجوع إلى دليل المستخدم (Fig. 15).

التهديب بالاحية منشط تشذيب

بعد شحن الحلاقة، لا تستخدمها لمدة تزيد عن 2 ساعة. إذا لم تكن متأكدًا من كيفية شحن الحلاقة، يرجى الرجوع إلى دليل المستخدم (Fig. 15).

CE RoHS Made in China

www.porodo.net | #porodo | #myporodo

دليل المستخدم



دقة عالية
ماكينة حلاقة للحية
مع شاشة رقمية

PD-LSRBHTR-BK

١. تأكد من إيقاف تشغيل الحلاقة في حوضها عند استخدامها في الحوض الكهربائي.
٢. هز رأس وحدة القطع الخاصة على طرف إبرة حتى يخرج حوض وحدة القطع في الفتحة المعلقة الشكل ١٣. لا تغمر رأس الحلاقة في الماء أو تغطها تحت الحوض المصنوع للصور. إذا لم تكن متأكدًا من كيفية غمر رأس الحلاقة في الماء أو كيفية تجنب الحوض بشكل صحيح، يرجى الرجوع إلى دليل المستخدم (Fig. 16).

تنشيط لاسلكي

بعد شحن الحلاقة، لا تستخدمها لمدة تزيد عن 2 ساعة. إذا لم تكن متأكدًا من كيفية شحن الحلاقة، يرجى الرجوع إلى دليل المستخدم (Fig. 15).

التشذيب

بعد شحن الحلاقة، لا تستخدمها لمدة تزيد عن 2 ساعة. إذا لم تكن متأكدًا من كيفية شحن الحلاقة، يرجى الرجوع إلى دليل المستخدم (Fig. 15).

التهديب بالاحية منشط تشذيب

بعد شحن الحلاقة، لا تستخدمها لمدة تزيد عن 2 ساعة. إذا لم تكن متأكدًا من كيفية شحن الحلاقة، يرجى الرجوع إلى دليل المستخدم (Fig. 15).

١. تأكد من إيقاف تشغيل الحلاقة في حوضها عند استخدامها في الحوض الكهربائي.
٢. هز رأس وحدة القطع الخاصة على طرف إبرة حتى يخرج حوض وحدة القطع في الفتحة المعلقة الشكل ١٣. لا تغمر رأس الحلاقة في الماء أو تغطها تحت الحوض المصنوع للصور. إذا لم تكن متأكدًا من كيفية غمر رأس الحلاقة في الماء أو كيفية تجنب الحوض بشكل صحيح، يرجى الرجوع إلى دليل المستخدم (Fig. 16).

تنشيط لاسلكي

بعد شحن الحلاقة، لا تستخدمها لمدة تزيد عن 2 ساعة. إذا لم تكن متأكدًا من كيفية شحن الحلاقة، يرجى الرجوع إلى دليل المستخدم (Fig. 15).

التشذيب

بعد شحن الحلاقة، لا تستخدمها لمدة تزيد عن 2 ساعة. إذا لم تكن متأكدًا من كيفية شحن الحلاقة، يرجى الرجوع إلى دليل المستخدم (Fig. 15).

التهديب بالاحية منشط تشذيب

بعد شحن الحلاقة، لا تستخدمها لمدة تزيد عن 2 ساعة. إذا لم تكن متأكدًا من كيفية شحن الحلاقة، يرجى الرجوع إلى دليل المستخدم (Fig. 15).