

**porodo**  
LIFESTYLE



**VACUUM FRESH PORTABLE  
JUICE & SMOOTHIE BLENDER**

MODEL:PD-P55JV-BK , PD-P55JV-WH, PD-P55JV-PL

## Brief introduction:

Thank you for your patronage and welcome! In order to fully enjoy our services, please visit our official website. This juice cup can help you squeeze all the nutrients from the fruit into the cup, so that you can enjoy delicious and healthy juice every day. Innovative technology allows you to extract more healthy juice and clean products quickly in 1 minute. Fully integrated design, less space and better juicing effect.

Please read the instructions carefully:

Note: In order to avoid misuse, please read the instructions.

This product is a DC motor driven by lithium battery. The charger is universal for all kinds of smartphone USB chargers. Please first use the USB power cord provided by our company to fully charge the product before use. The charging time is less than 2 times and above is appropriate. In addition, please wash and dry all parts that come into contact with food before use.

Open the lid only after the product is closed and the stirring knife has stopped completely.

When cleaning this product, please make sure that the switch power is off and the silicone of the charging port is plugged tightly before cleaning the cup and host. Do not wash the main engine in water to prevent water from entering the main engine and damaging the electronic components.

Please do not juice this product for more than 5 times in order to avoid excessive load of electronic components causing heat and affecting product life.

This product is equipped with overload protection function. If the size of the food material is too large, the product will stop for protection and accompanied by red light for 5 seconds. After removing the material, it can be restarted.

Each part of this product shall not be disinfected with hot water exceeding 60°C or microwave oven to avoid heat deformation and damage.

Do not put the main parts of the product into the dishwasher or cleaning equipment. Water cannot invade the main parts. Do not use steel velvet, abrasive cleaners, or corrosive liquids to clean the product.

This product is a special fresh juice machine, not mincing meat, grinding nuts, or soy products.

Do not invert the product or start the product when the straw is still inserted into the host or the silicone plug is not tightly plugged.

If unattended, always disconnect the juice machine before assembling, disassembling, or cleaning. Do not allow children to use the juicer without supervision.

Care should be taken when removing the mixing knife, cleaning the host, and mixing cup.

Turn off the power switch and disconnect the power supply before replacing accessories or touching moving parts.

Before discarding the appliance, the battery must be removed from the appliance using tools to pry.

15. Before discarding the appliance, remove the battery from the appliance and put the batteries in a separate battery waste bin. Dispose of them through a special person.

The appliance must be powered off when the battery is removed. Batteries should be disposed of safely.

This product is for household use only. If the product is improperly used, used for professional or semi-professional purposes, or the instructions in the manual are not followed, the warranty of this product will be void, and any resulting damage will not be covered by the company. The company disclaims any responsibility for such loss.

Before using the product for the first time, fully charge it and thoroughly clean the parts that come into contact with food.

The product is equipped with double safety protection measures. Only after the cup body is rotated to the fixed position of the fuselage, it is in the waiting operation state.

This appliance can only be charged if the input is 1.0-5.0A, and the maximum output energy is not more than 15W using a certified adapter.

## Instructions for use:

Review the previous notes.

Wash the fruit and cut it into small pieces, approximately 1.5\*1.5cm (Note: for fruits with stones, hard materials, thick skin, or hard shells, please remove them first).

Put the fruit into the cup, filling it up to approximately %60 of the maximum scale of the cup body. Then, fill the cup with water up to the maximum scale of the cup body. Afterward, turn the main engine to the cup. The indicator light will flash to indicate that the main engine is in place.

Note: Keep the fruit and water within the limit of the maximum scale to avoid spillage.

To enhance the taste, start the vacuumizing process first. Place the product upright on the tabletop and complete the vacuumizing after 40 seconds.

Note: Do not start vacuuming immediately after stirring to avoid damage caused by juice suction by the vacuum pump.

Double-click to start the product and reverse it (as shown in Figure 4). The default working time of the product is 40 seconds. During the working time, gently shake the product for better stirring effect.

After the juice is finished, the product will automatically enter the standby state. Press the exhaust button to open the top cover and you can drink it or plug it in.

If the product cannot be started and the indicator is blinking red while drinking through a straw, insert the USB cable into the charging port (applicable to each 5V power supply). When fully charged, the product indicator light will turn on in white.

red, insert the USB cable into the charging port (applicable to each

A 5V power supply); When fully charged, the product indicator light is on in white.

\* This product can be charged by connecting various smart phone chargers with their own USB charging cable, and can also be power bank charge the product (note: when charging, it is necessary to tighten the mixing cup with the host machine before charging). It takes about 3 hours for it to be fully charged, and it can make about 8 cups of fresh juice. Thank you for your use.

## Structural diagram:

Technical parameters:

Product model:JC-12

Battery voltage:7.4V—

Charging voltage:5V—

Charging current:1A


Motor speed:18000rpm

Mixing capacity:380ml

Net weight:553g

Product size: 210\*86\*94mm

- ①- Exhaust valve.
- ②- Upper cover
- ③- main engine
- ④- Handle rope
- ⑤- main engine sealing ring
- ⑥- Mixing knife
- ⑦- Mixing cup
- ⑧- Cup sets

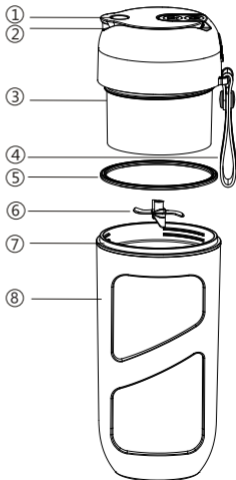

## Operation method.



## Cleaning instructions:



## Troubleshooting:

Symptoms	Cause analysis	Elimination method
Cannot stir or stop in use with a red light flashing	Low power	Please charge in time
When in use, the machine stops and the red light is on for 5 seconds.	Motor lock	Remove any food stuck in the blade and restart
Can not be vacuumed or stop in use with blue light flashing	Product tilt more than 30 degrees	Erect a product
Water leakage/ gas leakage	The silicone ring assembly is not in place or the cup body is not tightened	Reinstall the silicone ring and tighten the main engine.

## Warranty card:

Dear customer, thank you for your patronage!

1. The shelf life of this product is one to one year from the date of purchase
2. Please present this warranty card and valid purchase certificate or official invoice when repairing.
3. If used improperly, disassembled without permission or caused by force majeure factors, please indicate the situation,

Customer name		Contact number	
Customer Address			
Date of Purchase		Place of purchase	
Shop seal			

**porodo**  
LIFESTYLE



**خلاط العصائر والسموثي  
المحمول الطازج**

MODEL:PD-P55JV-BK , PD-P55JV-WH, PD-P55JV-PL

## مقدمة موجزة:

شكرًا لتفضيلكم ومرحبًا بكم! من أجل الاستمتاع الكامل بخدماتنا، يرجى زيارة موقعنا الرسمي. يمكن لهذه الكأس العصير مساعدتك في استخلاص جميع العناصر الغذائية من الفاكهة ووضعها في الكأس، حتى تتمكن من الاستمتاع بعصير لذيذ وصحي كل يوم. تقنية مبتكرة تسمح لك باستخلاص المزيد من العصير الصحي وتنظيف المنتجات بسرعة في دقيقة واحدة. تصميم متكامل بشكل كامل، يحتل مساحة أقل ويؤدي إلى تأثير عصر أفضل.

يرجى قراءة التعليمات بعناية:

ملاحظة: من أجل تجنب الاستخدام الخاطئ، يرجى قراءة التعليمات.

هذا المنتج يعمل بواسطة محرك DC يعمل بطارية الليثيوم، يُعد الشاحن متوافقًا مع جميع أنواع شواحن USB للهواتف الذكية. يرجى استخدام كابل الطاقة USB الذي يتم توفيره من قبل شركتنا لشحن المنتج بالكامل قبل الاستخدام. وقت الشحن يقل عن ٢ مرات ويعتبر الشحن المطلوب هو أعلى من ذلك، بالإضافة إلى ذلك، يرجى غسل وتجفيف جميع الأجزاء التي تتلامس مع الطعام قبل الاستخدام.

يرجى فتح الغطاء فقط بعد إغلاق المنتج وتوقف السكينة عن الدوران تمامًا.

عند تنظيف هذا المنتج، يرجى التأكد من إيقاف تشغيل التيار الكهربائي وتوصيل سداة الشحن بإحكام قبل تنظيف الكأس والجهاز الرئيسي. يرجى عدم غسل المحرك الرئيسي في الماء لمنع دخول الماء إلى المحرك الرئيسي وتلف المكونات الإلكترونية. يرجى عدم عصر المنتج أكثر من ٥ مرات لتجنب الحمل الزائد على المكونات الإلكترونية والحرارة الزائدة التي قد تؤثر على عمر المنتج.

هذا المنتج مزود بوظيفة حماية ضد الحمل الزائد. إذا كان حجم المواد الغذائية كبيرًا جدًا، سيتوقف المنتج للحماية وسيترافق ذلك مع وميض الضوء الأحمر لمدة ٥ ثوانٍ. بعد إزالة المواد، يمكن إعادة تشغيله. لا يجب تعقيم أي جزء من هذا المنتج بالماء الساخن الذي يتجاوز ٦٠ درجة مئوية أو في الميكروويف لتجنب التشوه والتلف الناتج عن الحرارة.

لا تضع الأجزاء الرئيسية للمنتج في غسالة الأطباق أو أدوات التنظيف. يجب أن لا يتسلسل الماء إلى الأجزاء الرئيسية.

لا تستخدم الصوف الفولاذي أو المنظفات الكاشطة أو السوائل القابلة للتآكل لتنظيف المنتج.

هذا المنتج هو جهاز عصارة طاقة خاصة، وليس لقطع اللحم أو طحن المكسرات أو منتجات الصويا.

لا تقلب المنتج أو تشغيله عندما يكون الشريط القشري لا يزال مدخلًا في الجهاز الرئيسي أو عندما لا يتم توصيل سداة السيليكون بإحكام.

إذا كنت غير موجود، يرجى فصل آلة العصير دائمًا قبل التجميع أو التفكيك أو التنظيف. لا تسمح للأطفال باستخدام العصارة بدون مراقبة.

يجب توخي الحذر عند إزالة شفرة الخلط وتنظيف الجهاز الرئيسي وكأس الخلط.

أوقف مفتاح التشغيل وافصل مصدر الطاقة قبل استبدال الملحقات أو لمس الأجزاء المتحركة.

قبل التخلص من الجهاز، يجب إزالة البطارية من الجهاز باستخدام أدوات للتنحريك.



قبل التخلص من الجهاز، يرجى إزالة البطارية من الجهاز ووضع البطاريات في حاوية نفايات البطاريات المنفصلة. يجب التخلص منها عن طريق شخص مختص.

يجب أن يتم إيقاف تشغيل الجهاز عند إزالة البطارية. يجب التخلص من البطاريات بطريقة آمنة.

هذا المنتج مخصص للاستخدام المنزلي فقط. إذا تم استخدام المنتج بطريقة غير صحيحة، أو استخدامه لأغراض مهنية أو شبه مهنية، أو عدم اتباع التعليمات الموجودة في الدليل، فإن الضمان الخاص بهذا المنتج سيكون بلا أثر، ولن يتم تغطية أي ضرر ناتج عن ذلك من قبل الشركة. تخلي الشركة عن أي مسؤولية تجاه هذه الخسائر.

قبل استخدام المنتج للمرة الأولى، يرجى شحنه بالكامل وتنظيف الأجزاء التي تتلامس مع الطعام جيدًا.

يتم تزويد المنتج بتدابير أمان مزدوجة، فقط بعد أن يتم تدوير جسم الكأس إلى الوضع الثابت للجسم الرئيسي، يكون في حالة الانتظار للتشغيل.

يمكن شحن هذا الجهاز فقط إذا كانت القدرة الواردة ١٠-٥٠ أمبير، والطاقة القصوى للإخراج لا تتجاوز ٥٥ واط باستخدام محول معتمد.

## تعليمات الاستخدام:

يرجى مراجعة الملاحظات السابقة.

قم بغسل الفاكهة وتقطيعها إلى قطع صغيرة بحوالي ١٥ × ١٥ سم (ملاحظة: بالنسبة للفواكه ذات النوى أو المواد الصلبة أو القشور السمكية أو القشور الصلبة، يرجى إزالتها أولاً).

ضع الفاكهة في الكأس، مملئها حتى نسبة تقريبية تصل إلى ٦٠٪ من السعة القصوى لجسم الكأس. ثم، املا الكأس بالماء حتى السعة القصوى لجسم الكأس. بعد ذلك، قم بتثبيت الجهاز الرئيسي على الكأس. سيومض الضوء المؤشر للإشارة إلى أن الجهاز الرئيسي في مكانه.

ملاحظة: حافظ على الفاكهة والماء داخل الحد الأقصى للسعة لتجنب التسرب.

لتعزيز الطعم، قم ببدء عملية الفراغ أولاً. ضع المنتج بشكل مستقيم على سطح الطاولة واكمل عملية الفراغ بعد ٤٠ ثانية.

ملاحظة: لا تبدأ عملية الفراغ على الفور بعد التحريك لتجنب التلف الناتج عن شفط العصير بواسطة مضخة الفراغ.

انقر تفرًا مزدوجًا لبدء المنتج وعكسه (كما هو موضح في الشكل E). الوقت الافتراضي للعمل للمنتج هو ٤٠ ثانية. خلال وقت العمل، قم برج الجهاز بلطف للحصول على تأثير تحريك أفضل.

بعد انتهاء العصير، سيدخل المنتج تلقائيًا في وضع الاستعداد. اضغط على زر التهوية لفتح الغطاء العلوي ويمكنك شربه أو توصيله بالكهرباء.

إذا لم يتمكن المنتج من البدء وكان المؤشر يومض باللون الأحمر أثناء شرب العصير من خلال الشفاطة، قم بإدخال كابل USB في منفذ الشحن (ينطبق على أي مصدر طاقة بقوة ٥ فولت). عندما يتم شحنه بالكامل، سيتم تشغيل ضوء المؤشر للمنتج باللون الأبيض.

إذا كانت الإشارة حمراء، قم بإدخال كابل USB في منفذ الشحن (ينطبق على أي مصدر طاقة بقوة ٥ فولت). عندما يتم شحنه بالكامل، سيكون ضوء المؤشر للمنتج مضاءً باللون الأبيض.

يمكن شحن هذا المنتج عن طريق توصيل مختلف شواحن الهواتف الذكية باستخدام كابل الشحن الخاص بها. ويمكن أيضًا شحن المنتج باستخدام بنك الطاقة (ملاحظة: عند الشحن، يجب ربط كأس الخلط بالجهاز الرئيسي قبل الشحن). يستغرق حوالي ٣ ساعات لشحنه بالكامل. ويمكن أن يعمل لـ ٨ أكواب من العصير الطازج. شكرًا لاستخدامك.

## الرسم البيئي:

المعلومات التقنية:

طرز المنتج: JC-١٢

جهد البطارية: ٧.٤ فولت - جهد الشحن: ٥ فولت - تيار الشحن: ١ أمبير

سرعة المحرك: ١٨٠٠٠ دورة في الدقيقة

سعة الخلط: ٣٨٠ مل

الوزن الصافي: ٥٣ جرام

حجم المنتج: ٨٦ \* ٩٤ ملم

١. صمام التهوية.

٢. الغطاء العلوي.

٣. المحرك الرئيسي.


٤. حبل المقيض.

٥. حلقة الختم الرئيسية للمحرك.

٦. سكين الخلط.

٧. كوب الخلط.

٨. مجموعة الكأس.

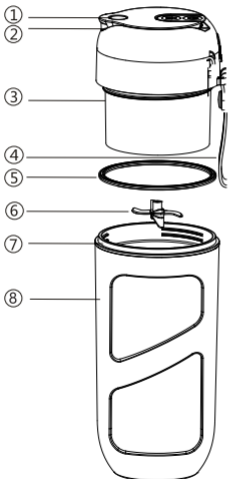

## طريقة التشغيل.



إضافة  
المكونات



تركيب الجهاز  
الرئيسي

انقر بقرصاً مزدوجاً فوق أبدا



عملية الفراغ

انقر بقرصاً مزدوجاً فوق أبدا



بدء عملية  
الخط



خلط بالتوجيه  
المقلوب

ضغط الغطاء



تهوية



فتح الغطاء  
للشرب



فتح الغطاء  
للشرب

وميض الضوء الأحمر



فتح الغطاء  
للشرب

وميض الضوء الأبيض



فتح الغطاء  
للشرب

## تعليمات التنظيف:



## طريقة التشغيل.

الأعراض	تحليل الأسباب:	طرق التصحيح:
عدم القدرة على الخلط أو التوقف أثناء الاستخدام مع وميض الضوء الأحمر.	انخفاض مستوى الطاقة.	يرجى شحن المنتج في الوقت المناسب.
عند الاستخدام يتوقف المحرك ووميض الضوء الأحمر لمدة ٥ ثوانٍ.	قفل المحرك.	قم بإزالة أي طعام عالق في الشفرة وأعد التشغيل.
عدم القدرة على عمل عملية الفراغ أو التوقف أثناء الاستخدام مع وميض الضوء الأزرق.	امتداد المنتج بزاوية تزيد عن ٣٠ درجة.	ثبت المنتج بشكل عمودي.
تسرب المياه/تسرب الغاز.	عدم وضع حلقة السيليكون بشكل صحيح أو عدم تثبيت جسم الكأس بإحكام.	أعد تثبيت حلقة السيليكون وشد المحرك الرئيسي بإحكام.

## بطاقة الضمان:

- عزيزي العميل، شكرًا لاختياركم لمنتجاتنا!  
١. صلاحية هذا المنتج هي سنة واحدة من تاريخ الشراء.  
٢. يرجى تقديم بطاقة الضمان وشهادة الشراء الصالحة أو الفاتورة الرسمية عند القيام بعمليات الصيانة.  
٣. إذا تم استخدام المنتج بشكل غير صحيح، أو تم فكه بدون إذن، أو تعرض لظروف قاهرة، يرجى توضيح الحالة.

اسم العميل:	رقم الاتصال:		
عنوان العميل:			
تاريخ الشراء:	مكان الشراء:		
ختم المتجر:			